


# Stand Out with Your Excellent Cosmetic Advice

## Multi Skin Test Center<sup>®</sup> MC 1000 & Software

moisture, oil, melanin, pH, elasticity & many more

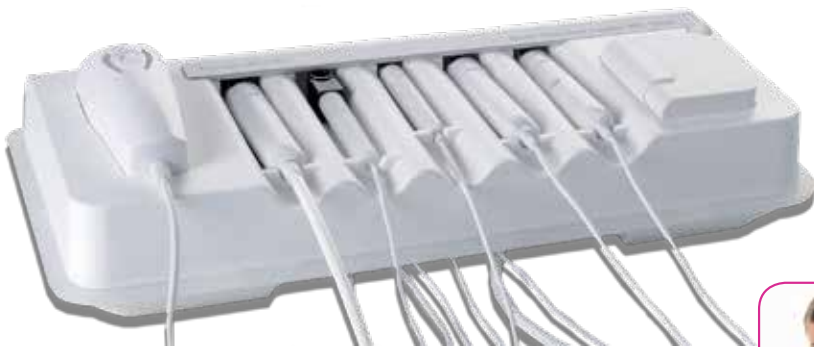

Allows operating all C+K probes at the same time according to individual demands due to modular C+K probe technology.

C+K-measuring probes for following parameters can be connected: moisture, oil, pH, pigmentation & redness, transepidermal water loss (TEWL – the barrier function of the skin), skin temperature and elasticity.

Additionally the cameras Visioscope<sup>®</sup> PC35 or/and Visiopor<sup>®</sup> PP 34N can be connected.



The **Multi Skin Test Center<sup>®</sup> MC750** offers the features like the MC 1000 except for the camera functions.

Please ask for our special transportation accessories.

#### Technical Data:

External power supply: Input: 100-240 V, 50-60 Hz, Output: 12 V, 4 A, Dimensions: 46 x 22 x 9 cm;  
Weight without probes: approx. 1.8 kg, Interface: USB 2.0

#### Measuring principles:

Moisture: capacitance (scale 0-99); Sebum: photometrical (scale 0-99); Elasticity: suction (scale 0-99);  
Melanin/Erythema: absorption/reflection (scale 0-99); pH: glass electrode (pH with one decimal);  
TEWL-Index: open chamber water flux measurement (scale 0-20)

Additional Visioscope<sup>®</sup> PC35 or Visiopor<sup>®</sup> PP 34N

Devices must be operated by an IBM-compatible computer with Windows<sup>®</sup> XP or higher and a USB-port.  
Technical changes may be made without prior notice.



moisture

oil

colour or  
pigmentation

pH

temperature

elasticity

barrier function

# Stand Out with Your Excellent Cosmetic Advice

## Multi Skin Test Center® MC 1000 & Software

moisture, oil, melanin, pH, elasticity and many more

### CSI-Software

- Very user-friendly and appealing software "Complete Skin Investigation" simplifying work with the system
- Individual product recommendations for skin care, hair care and sun screen products which can be printed out for the customer
- Easy increase of sales by offering a special service to distinguish from competitors and to secure customers retention

The software offers 6 modules:

- Visioface® 1000D** (see page 15/16) programme is integrated
- Questionnaire combined with moisture, sebum and elasticity measurements as well as the camera measurements (optional) calculates **skin type** and recommends a set of skin care products (from cleansing to day and night care, additional care and food supplements) for women or men
- Imaging** with Visioscope® PC35 and calculation of pores, spots and wrinkles. Easy comparison of customer images side by side. The Visiopor® PP34N shows the porphyrines from the acne bacteria.

- Sebum production and desquamation can be analyzed with the special foils Sebu-fix® and Corneofix®.
- Hair analysis** (measurement of sebum, colour, imaging for dandruff, hair thickness) with questionnaire and product recommendation
- Answering questions and measurement of melanin content allows determination of most suitable **sun screen** and aftersun products, taking into account where, when and how long somebody is going to be exposed to the sun including the respective UV-index
- Single measurements** (moisture, sebum, elasticity, pigmentation/erythema, pH, temperature and TEWL) in any order and on any body site to be saved and printed out
- User can easily enter the products to be recommended in each programme according to the age of the person, the measurement results and answers to the questions
- The appearance of the software can be easily changed by altering the name of the programme, exchange colours or the start screen picture, add a logo or even create a new questionnaire.

